



DEACTIVATOR

FOR AM LABELS

58kHz EAS SYSTEM



Distance
Deactivation



Confirmation of
Deactivation



Double
Checker Mode



Laptop Tunable



Audible/Visible
Alarm



High
Throughput



CE approved



Designed and manufactured
in Europe



RoHS & Green

Dexilon AM Label DEACTIVATOR is a very compact, all in one, distance active deactivate designed to be installed in a wide variety of places.

Unlike other deactivators, Dexilon AM label deactivate will detect, deactivate and confirm the deactivation in a fraction of a second up to 15 cm above the pad. Any direct contact with the label is unnecessary, allowing quick operation and avoiding needless loss of time at the Point Of Sale. It is equipped with light and audible signals.

Its advanced, state of the art, fully digital signal processing allows to work under challenging conditions.

It is fully tuned through our integrated, intuitive and easy to use tuning software leading to quick phasing and service.


The deactivate has an elegant and functional design. It is easy to install anyway and anywhere: Flush mount, under the table (ACC-DEACTHOLD needed) or vertical mount (ACC-DEACTVERT needed).

All the electronics are located inside of the pad, so no extra electronics or power supplies installation is necessary.

The deactivate is available in several colours. Standard colours are white, black and grey. Other colours under demand.



DIFFERENT WAYS OF INSTALLATION TO
ADAPT TO ANY STORE REQUIREMENT

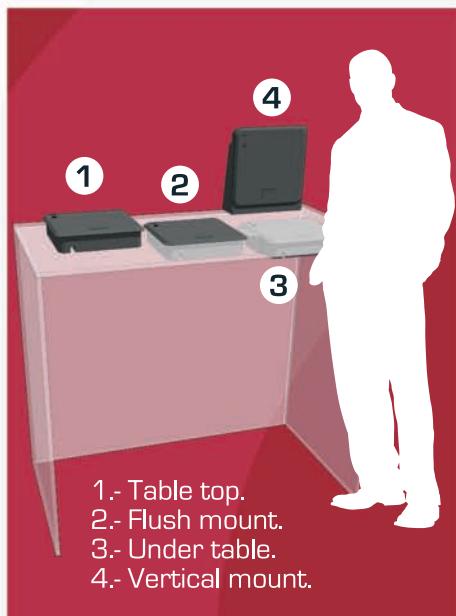

58kHz EAS SYSTEM

DEACTIVATOR

FEATURES

Compatible with all 58khz systems	✓
Distance detection	✓
Distance deactivation	✓
Double checker mode	✓
Confirmation of deactivation	✓
Laptop tunable	✓
Remote tuning (Internet)	✓
Remote tuning (MODEM)	✓
Audible alarm	✓
Visible alarm	✓
Customizable colour	✓
Tuning software	✓
System passwords	✓
Maximum deactivation range*	15 cm

MEASURES AND WEIGHT

Width	25 cm
Depth	24 cm
Height	5,5 cm
Weight	2 kg
Mains	110/220V

Included	✓
Option	⊖
Not available	✗

* Above the pad's surface. Valid only for original SENSORMATIC DR LABEL.

WAYS OF INSTALLATION

FLUSH MOUNT

VERTICAL MOUNT

* ACC-DEACTVERT NEEDED



TABLE TOP

UNDER TABLE

* ACC-DEACTHOLD NEEDED

